


Montaj Talimatları









Installation instructions

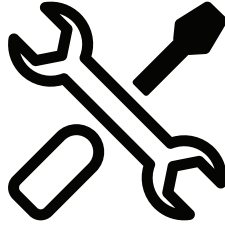


K69400



Document Number: 5858790100 - AK

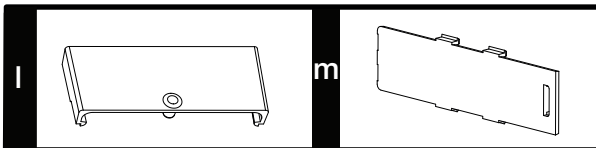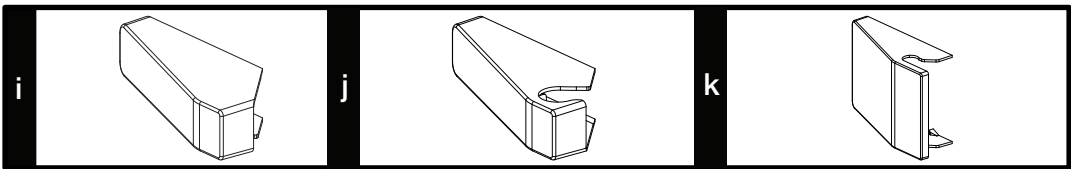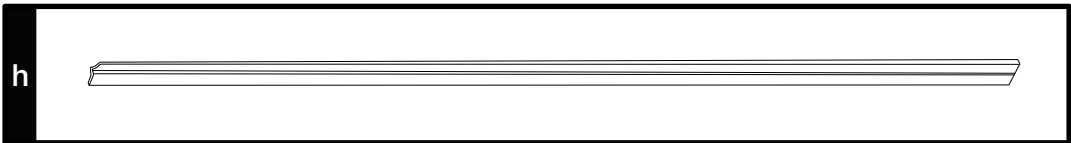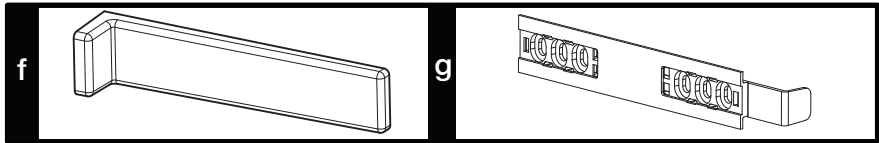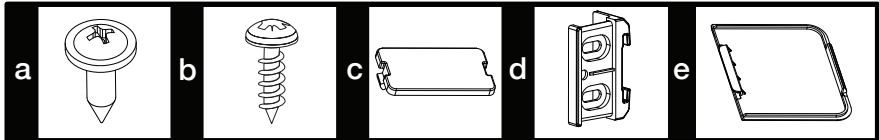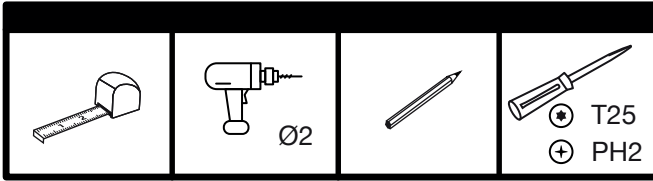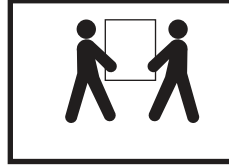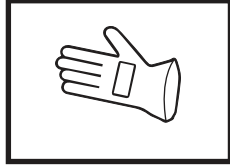





1

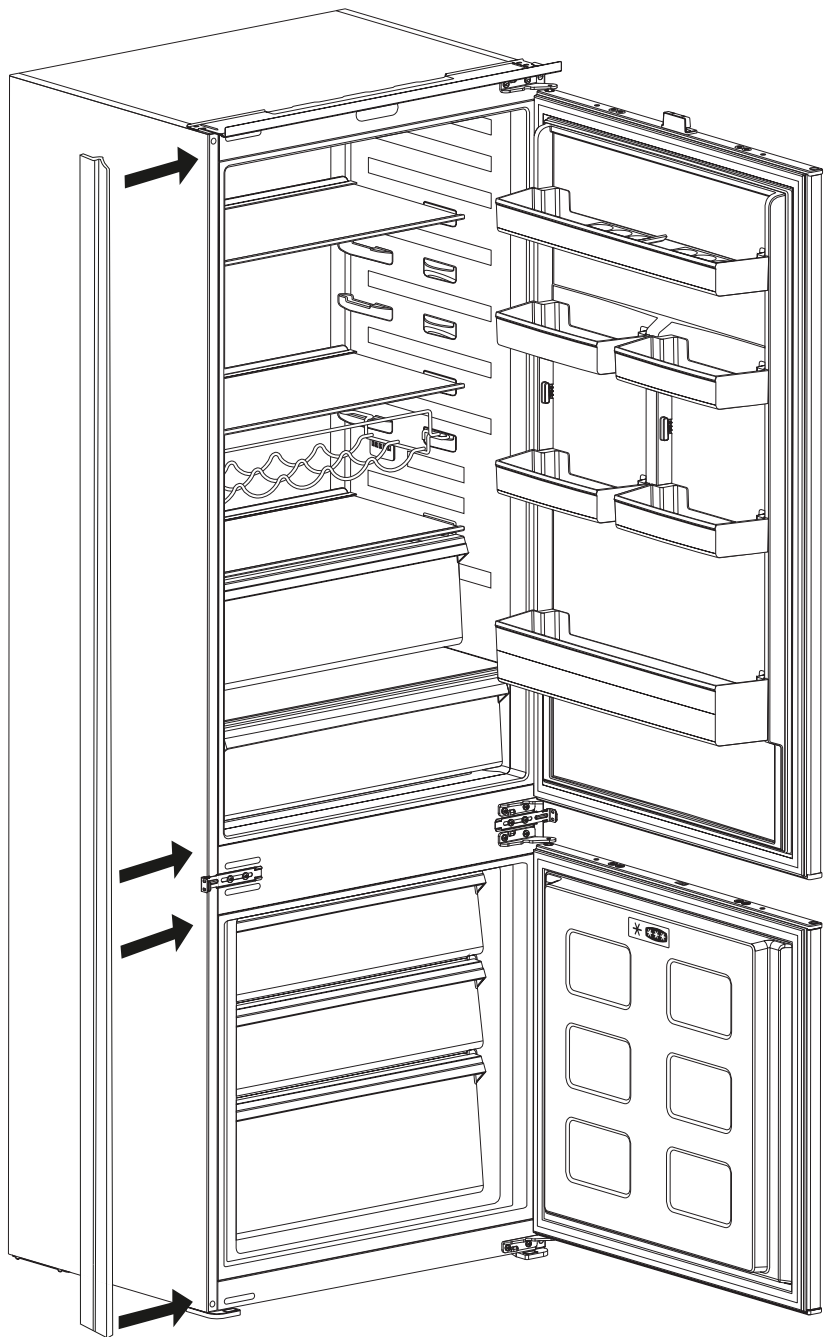


h





2

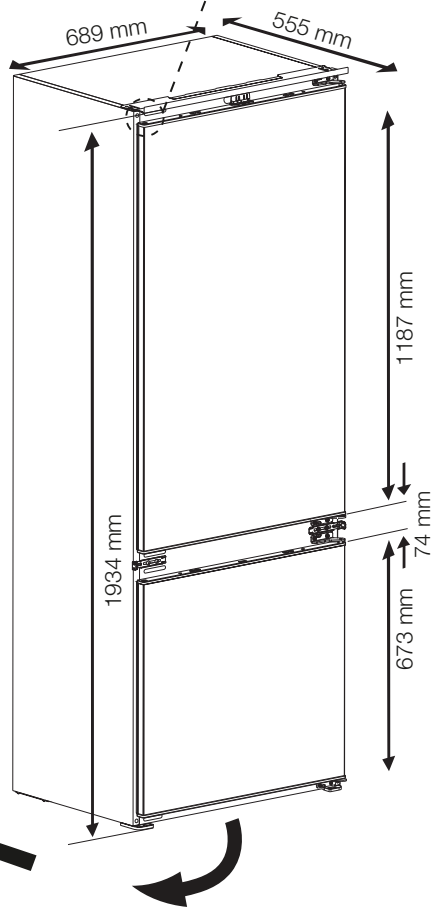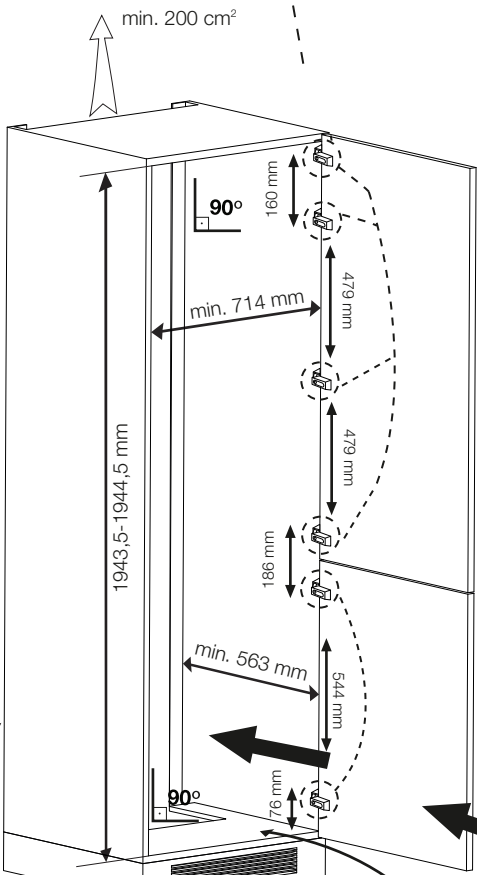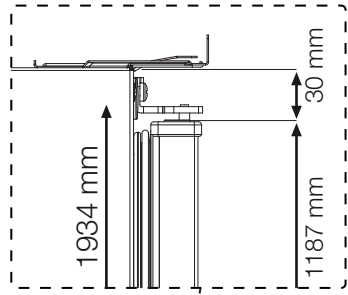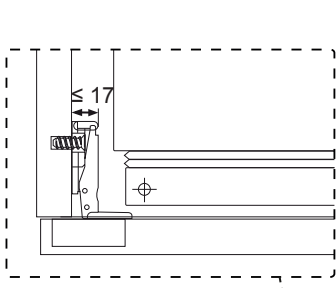




No wooden back wall

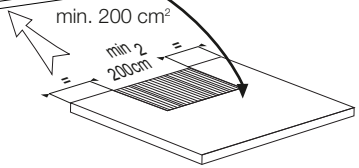

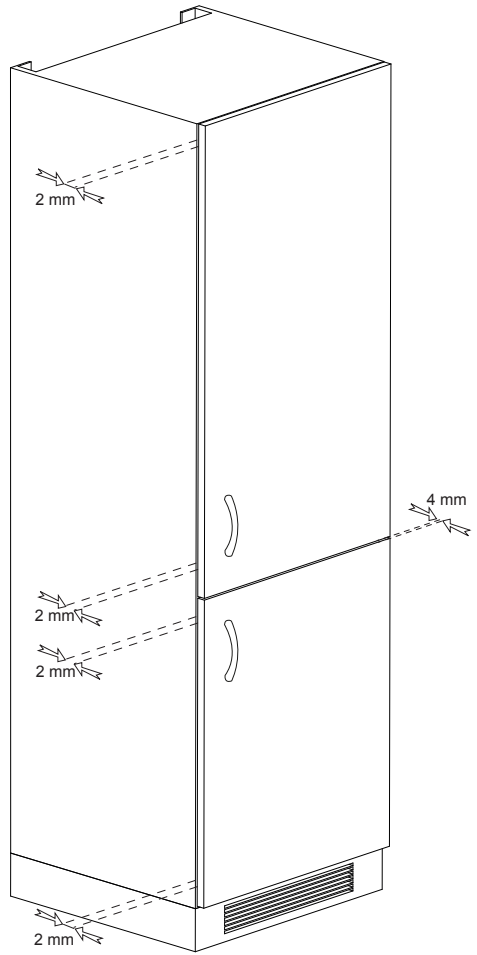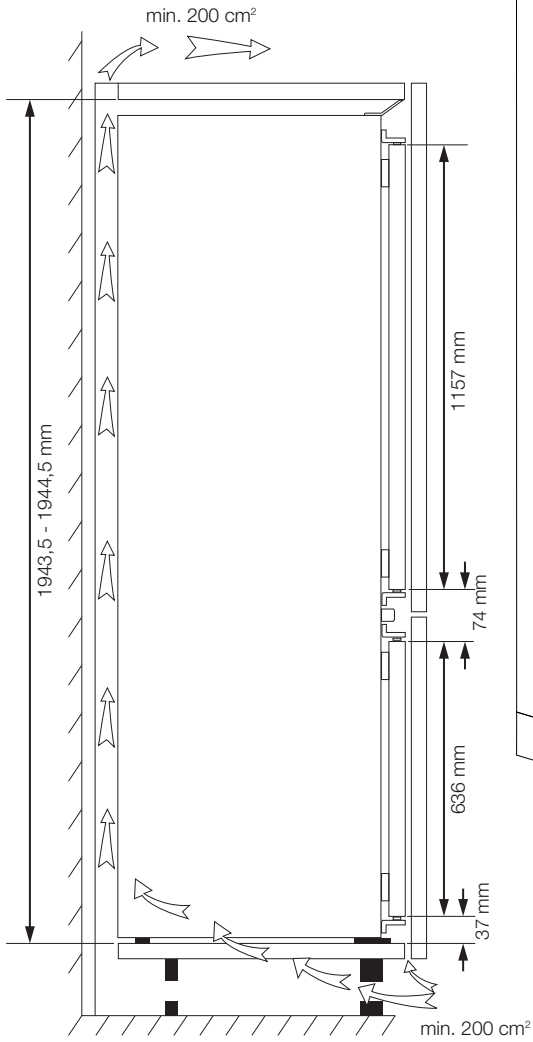




4.1

1

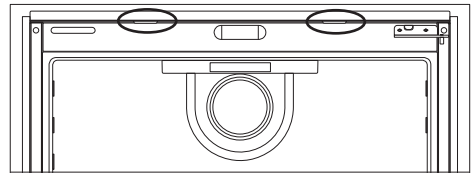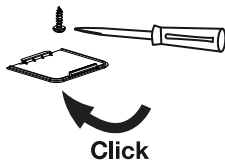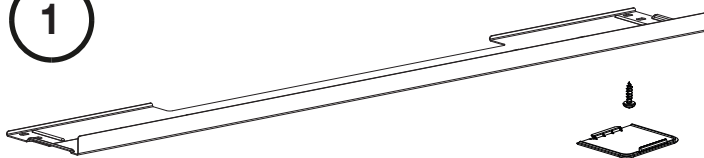




4.2

2

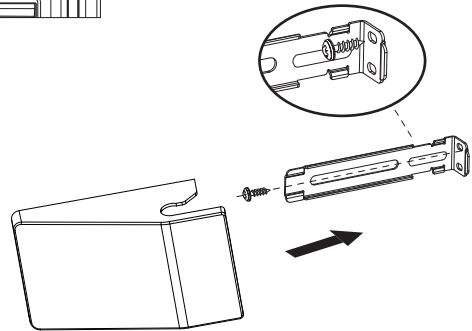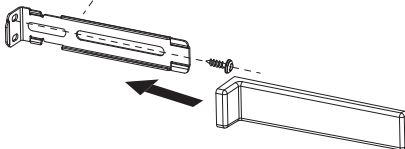





4.3

3

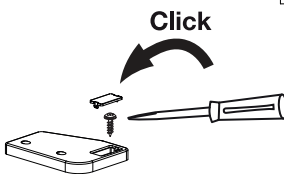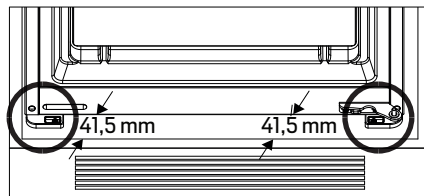




5

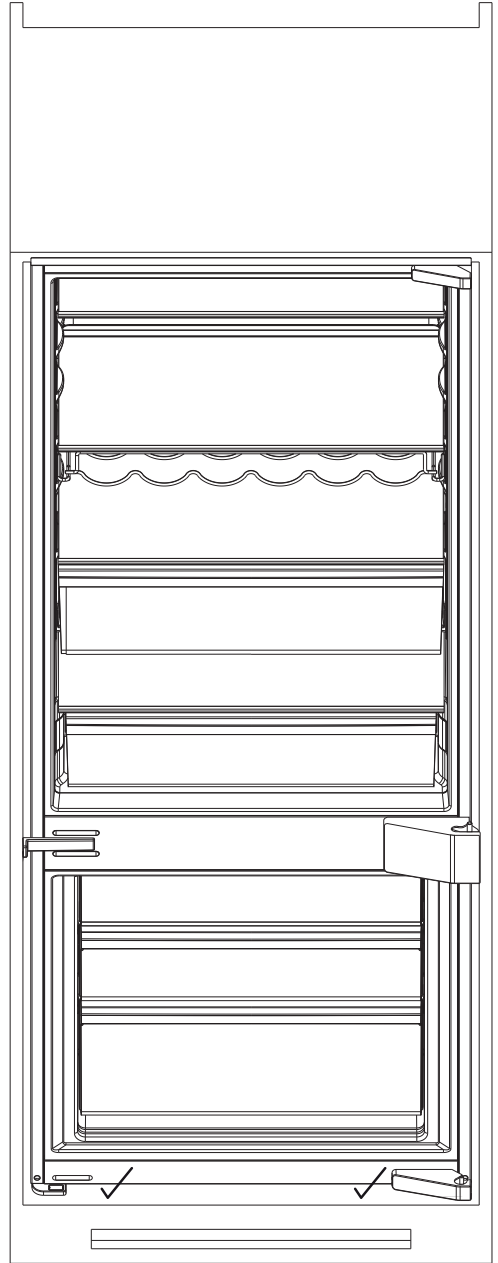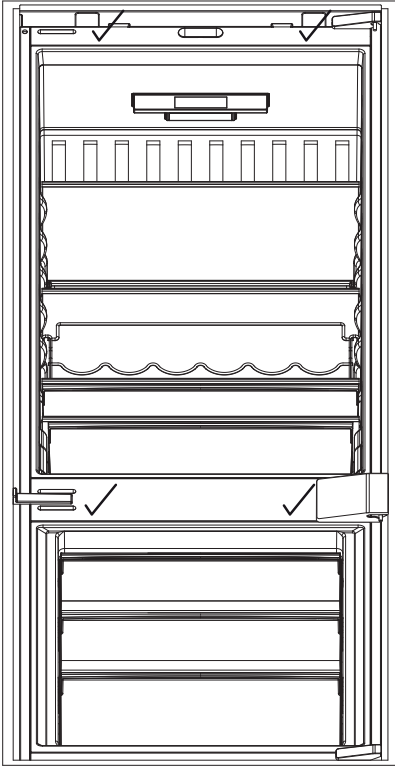

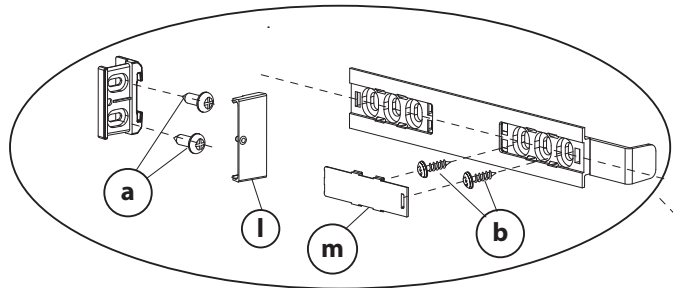



6

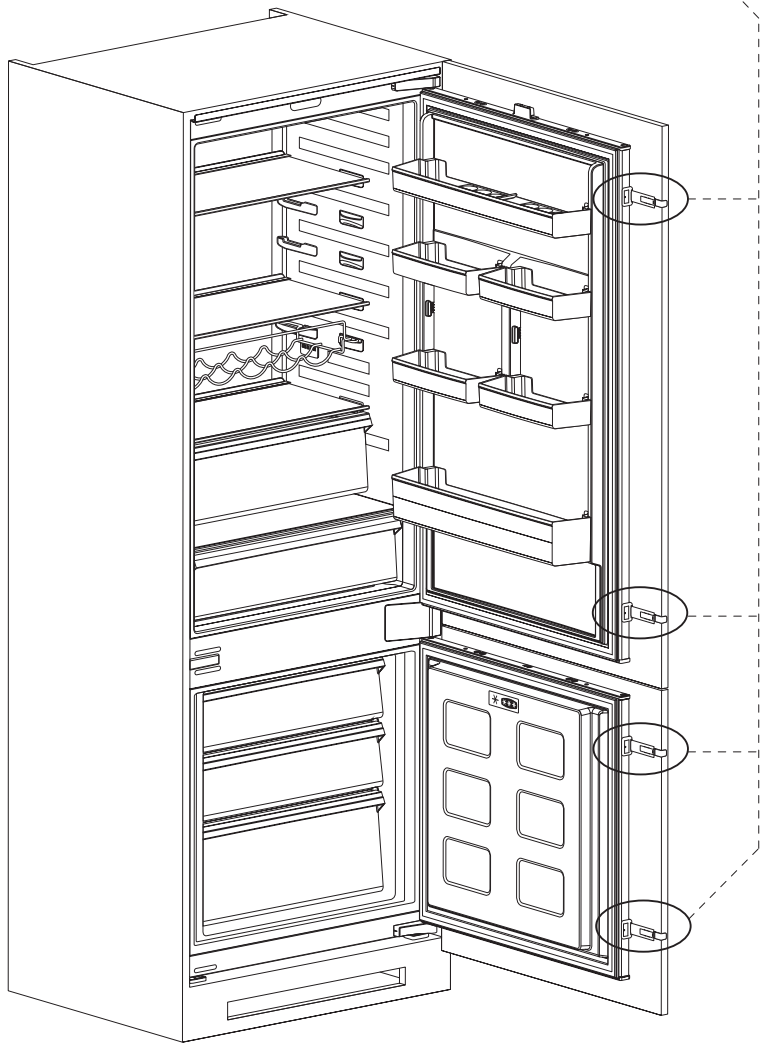


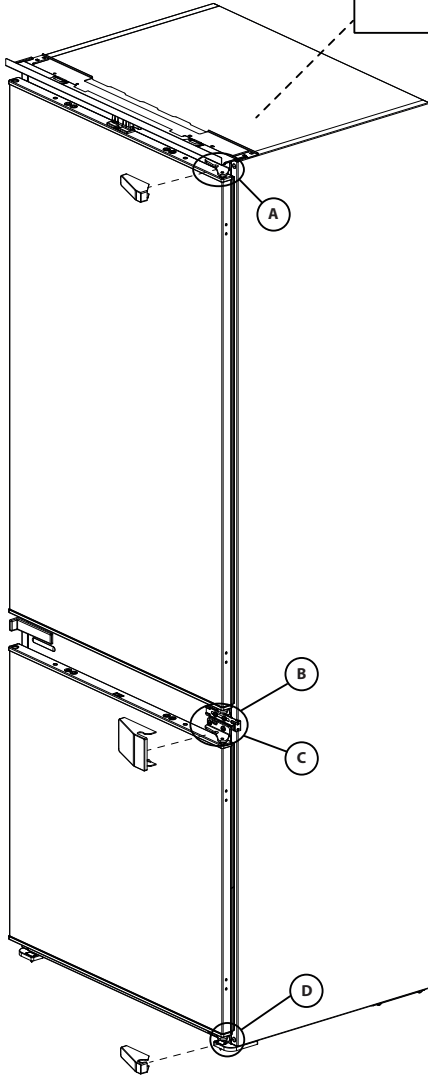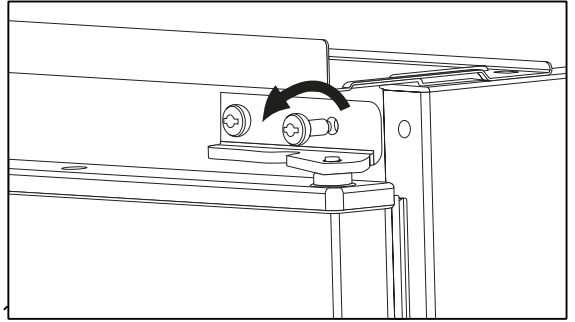

7

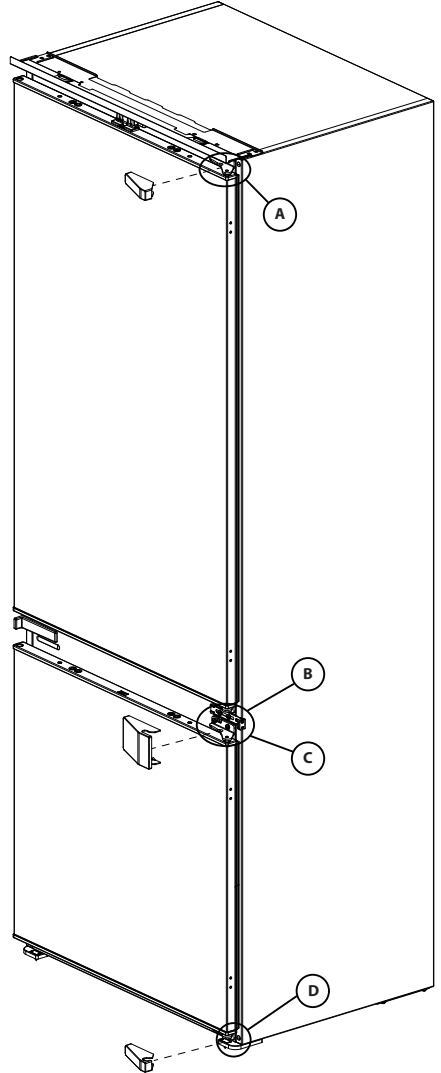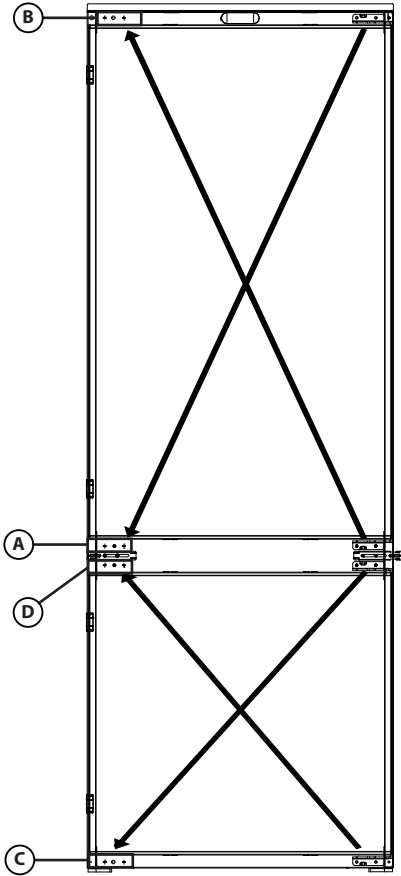


5707140100



5707140100


4647210100

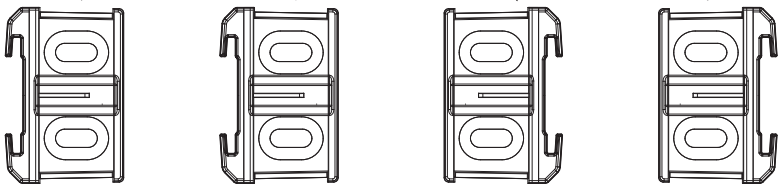


5842140100



4049730100



5842130200



5842130100

